
Solve Caps Lock, Scroll and Num Lock are constantly blinking (Zero series)

Step 1: Download USB_FD and Firmware

 
USB_FD Link: http://www.duckychannel.com.tw/software/USB_FD.exe

Firmware: Please enquiry support@duckychannel.com.tw


Step 2: Push the Keyboard into the USB port

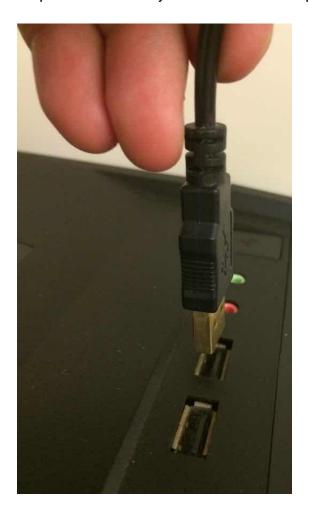


Step 3: Open USB_FD




Step 4: Make sure to open the correct software

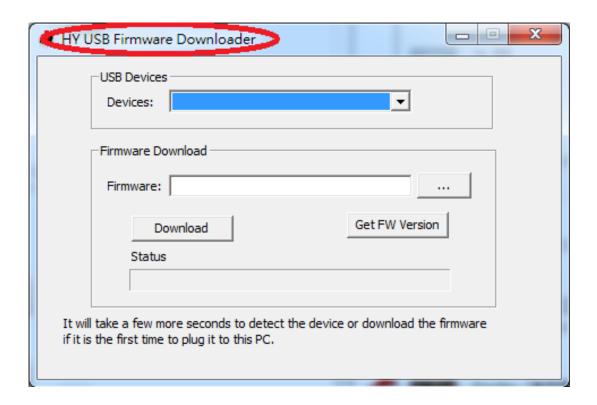

Step 5: Select your keyboard

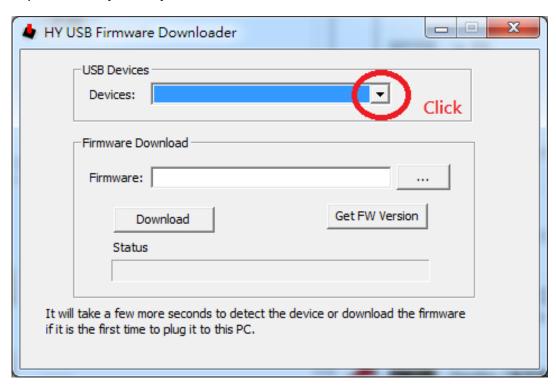


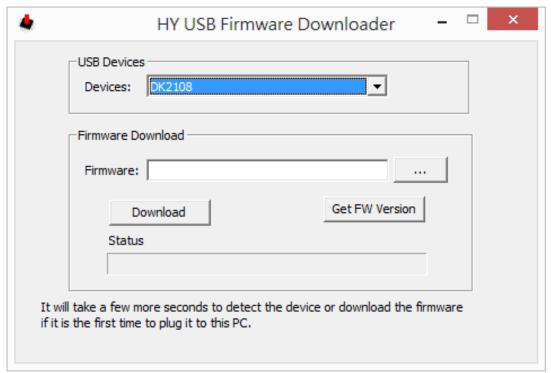



^{*}Devices might be showing garbage characters, don't worry it's normal situation.

^{*}Please do not update two keyboards at the same time. Make suer only one keyboard contact compture.

Step 6: Select Firmware

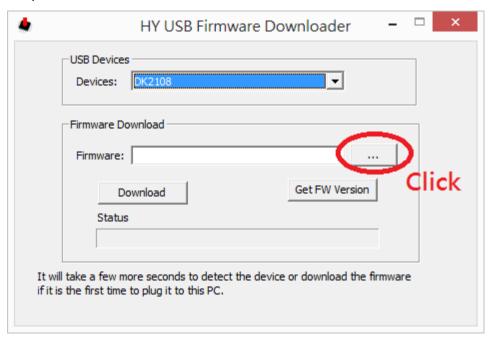

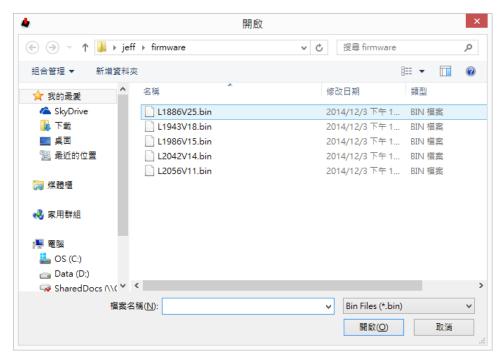

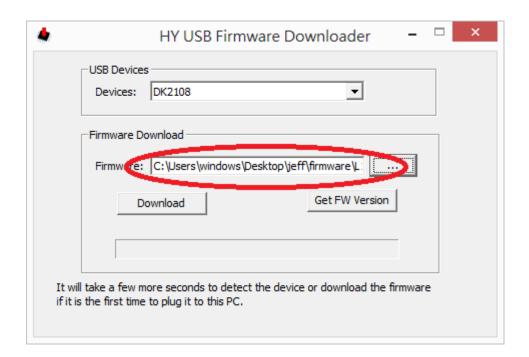

Step 7: Start update firmware

