解決 Caps Lock, Scroll and Num Lock 持 續閃爍問題

步驟 1: 下載軟體(USB_FD)與韌體

軟體連結: <u>http://www.duckychannel.com.tw/software/USB_FD.exe</u> 韌體: 請洽詢 Ducky 客服部門 <u>support@duckychannel.com.tw</u>

步驟 2: 插入鍵盤



步驟 3: 打開軟體



步驟 4: 確認打開正確的軟體

CHY USB Firmware Downloader
USB Devices
Firmware Download
Download Get FW Version Status
It will take a few more seconds to detect the device or download the firmware if it is the first time to plug it to this PC.

步驟 5: 選擇鍵盤

USB Devices	回點
Firmware Download	
Firmware:	
Download	Get FW Version
Status	
will take a few more seconds to deter	rt the device or download the firmware

USB Device	S DK2108				
-Firmware D	ownload				
Firmware	:				
[ownload		Get FW Version		
Statu	S				
It will take a few r	nore seconds to detec	t the device	or download the fi	rmware	

步驟 6: 選擇韌體

٠		HYU	JSB Firm	ware D	ownload	der	_		×
	-USB D Devi	evices ces: DK2108	3			•			
	Firmw	are Download					_]	
	Firm	ware:				C		聖片	毄
		Download			Get FW	Version		mu	-
	[status					_		
It will if it is	take a the firs	few more seco st time to plug i	nds to detec t to this PC.	t the devi:	ce or downle	oad the r	firmware		
▲ 開啟茜檔	, his								×
46答册 ▼) ▶ bin 新博容	料本				▼ * ↑	授尋 bin	8== 🗸	
→ 我的最愛		名稱		信	20日期	類型	大	<u>ا</u> ر	
Stropb	ox	L1886V25.bi		20	14/12/4 下午 0	BIN 檔案		32 KB	
● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●		L1943V18.bi		20 20	14/12/4 卜午 0 14/12/4 下午 0	BIN 檔案 BIN 檔案		32 KB 32 KB	
		L2042V14.bi		20	14/12/4 下午 0	BIN 檔案		32 KB	
🥃 煤體櫃 퉬 Apps			"	20	14/12/4 トー 0	DIIN 1田 興		50 KB	
			選取正確的fin	mware					
_) 言策 									
圖片									
🜏 家用群組	I								
■ 電腦	-								
	檔絮	≰名稱(<u>N</u>):				▼ Bi	n Files (*.bin) 開歐舊檔(<u>O</u>)	•	▼
🔶 ну с	JSB Fir	mware Dow	nloader	×.					x
		Devices							
	Devi	ices:				•			
	Firmw	vare Download							
	Fire	ware: C:\Use	ers\Jeff\Des	ktop\bin\	.1886V25.b	in [[
		Download			Get F	W Versio	on		
It wil if it is	l take a the fire	few more sec st time to plug	onds to dete it to this PC	ect the de	vice or dow	nload th	e firmwa	re	

步驟 7: 開始更新韌體

🖕 HY USB Firmware Downloader
USB Devices Devices:
Firmware Download Firmware: C:\Users\Jeff\Desktop\bin\L1886V25.bin Download 監鞏Download
It will take a few more seconds to detect the device or download the firmware if it is the first time to plug it to this PC.

請勿於更新時 "拔掉USB接頭"